

**CS-2/CS-3  
OPERATING & BOLT - DOWN INSTRUCTIONS**

Your Safe code is: 1,5,9,0,0,

**TO OPEN:**

Enter the code (when a key is pressed, there will be a beep and the LED will flash Yellow) followed by pressing the “#” key. Green LED will remain on for 5 seconds. Within 5 seconds, turn the knob clockwise to open the safe door.

**TO CLOSE:**

Close the safe door and turn the knob counterclockwise

**IMPORTANT:**

All CS-2/CS-3 safe models initially work with the safe code noted at the top of this sheet. It is therefore important to re-program your safe with a new user code you have personally selected, to provide maximum security. Please see instructions that follow:

**TO PROGRAM YOUR NEW USER CODE:**

Open the door and press the red button inside the safe, on the door back. Yellow LED will go on. Enter your new code (3-8 digits) followed by the “#” key. Yellow LED will go off to indicate the new code has been accepted and stored.

**If the new programming attempt fails, the Yellow LED will flash with five beeps. You must attempt your new code again.**

**NOTE: Once your code is changed, keep it in a secure place. Your original safe code cannot be used again to open the safe.**

**TO OPEN IN EMERGENCY:**

Remove the battery cover and the batteries, then use the override key and turn it clockwise. Now turn the knob clockwise to open the door.

**TO CHANGE THE BATTERIES:**

The yellow light will go on when a key is pressed. This indicates the batteries are below 5V. Open the safe door and replace with new batteries.

**TO REMOVE BATTERY COVER:**

Grasp cover, located below the knob. At finger recess, slide cover downward, approximately 12mm, then remove cover by pulling it toward you.

**NOTE: Please do not place the override key in your safe.**

**For security purposes, duplicate override keys - ARE NOT AVAILABLE.**

**Please secure your override keys in a safe place. If the override keys are lost or damaged, please contact your local locksmith.**

**BOLT-DOWN INSTRUCTIONS:**

To help provide maximum security, bolt down is strongly recommended.

1. Select a suitable and convenient location for your safe. Set the safe in place and use the holes provided in the bottom or back of the safe to mark the location of the holes to be drilled in the floor or wall. It is not recommended to attempt to bolt to both floor and wall. If bolting to a wall, please ensure that the safe is resting on a supporting surface, i.e. floor, table or shelf.
2. Move the safe away and drill holes of the appropriate diameter and depth for the type of hardware being used and the mounting surface (2 each — bolts, washers and masonry anchors).
3. Place the safe back over the holes and install the fasteners as required.

**CS-2/CS-3  
MODE D'EMPLOI**

Le code de votre coffre-fort est : 1,5,9,0,0,

**OUVERTURE :**

Tapez le code (un bip est émis et la DEL clignote en jaune dès qu'une touche est enfoncée), puis appuyez sur la touche « # ». La DEL s'allume en vert pendant 5 secondes. Durant ces 5 secondes, tournez la clé dans le sens des aiguilles d'une montre pour ouvrir la porte du coffre-fort.

**FERMETURE :**

Fermez la porte du coffre-fort et tournez le **bouton** dans le sens inverse des aiguilles d'une montre.

**IMPORTANT:**

**Tous** les modèles de coffre-fort CS-2/CS-3 fonctionnent initialement avec le code de sécurité indiqué ci-dessus.

Pour une sécurité optimale, il est donc important de reprogrammer votre coffre-fort avec le nouveau code utilisateur que vous aurez choisi personnellement. Reportez-vous aux instructions ci-dessous :

**PROGRAMMATION D'UN NOUVEAU CODE UTILISATEUR :**

Ouvrez la porte et appuyez sur le bouton rouge situé à l'intérieur du coffre-fort, à l'arrière de la porte. La DEL s'allume en jaune. Tapez votre nouveau code (de 3 à 8 chiffres), puis appuyez sur la touche « # ». La DEL s'éteint pour indiquer que le nouveau code a été accepté et enregistré.

Si la programmation du nouveau code échoue, la DEL